MICROWAVE OVEN

M1732 (WHITE / GRAY)

M1733 (WHITE / GRAY)

SERVICE Manual

MICROWAVE OVEN

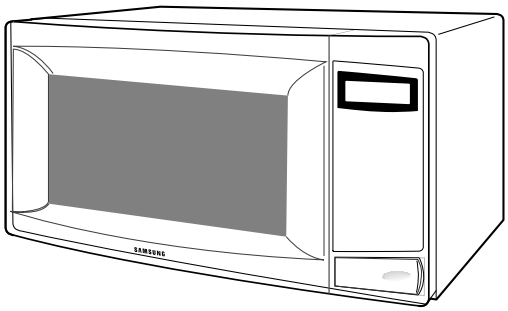

M1732

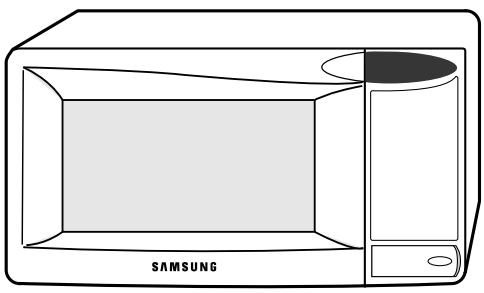

M1733

CONTENTS

1. Precaution

2. Specifications

3. Operating Instructions

4. Disassembly and Reassembly

5. Alignment and Adjustments

6. Troubleshooting

7. Exploded Views and Parts List

8. PCB Diagrams

9. Schematic Diagrams

1. Precaution

Follow these special safety precautions. Although the microwave oven is completely safe during ordinary use, repair work can be extremely hazardous due to possible exposure to microwave radiation, as well as potentially lethal high voltages and currents.

1-1 Safety precautions (⚠)

1. All repairs should be done in accordance with the procedures described in this manual. This product complies with Federal Performance Standard 21 CFR Subchapter J (DHHS).

2. Microwave emission check should be performed to prior to servicing if the oven is operative.

3. If the oven operates with the door open : Instruct the user not to operate the oven and contact the manufacturer and the center for devices and radiological health immediatly.

4. Notify the Central Service Center if the microwave leakage exceeds 5 mW/cm^2

5. Check all grounds.

6. Do not power the MWO from a "2-prong" AC cord. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.

7. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including: nonmetallic control knobs and compartment covers.

8. Make sure that there are no cabinet openings through which people--particularly children--might insert objects and contact dangerous voltages. Examples: Lamp hole, ventilation slots.

9. Inform the manufacturer of any oven found to have emmission in excess of 5 mW/cm^2, Make repairs to bring the unit into compliance at no cost to owner and try to determine cause.
   Instruct owner not to use oven until it has been brought into compliance.

   CENTRAL SERVICE CENTER

10. Service technicians should remove their watches while repairing an MWO.

11. To avoid any possible radiation hazard, replace parts in accordance with the wiring diagram. Also, use only the exact replacements for the following parts: Primary and secondary interlock switches, interlock monitor switch.

12. If the fuse is blown by the Interlock Monitor Switch: Replace all of the following at the same time: Primary, door sensing switch and power relay, as well as the Interlock Monitor Switch. The correct adjustment of these switches is described elsewhere in this manual. Make sure that the fuse has the correct rating for the particular model being repaired.

13. Design Alteration Warning:
    Use exact replacement parts only, i.e., only those that are specified in the drawings and parts lists of this manual. This is especially important for the Interlock switches, described above. Never alter or add to the mechanical or electrical design of the MWO. Any design changes or additions will void the manufacturer's warranty.10.Always unplug the unit's AC power cord from the AC power source before attempting to remove or reinstall any component or assembly.

14. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.

15. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs). Examples include integrated circuits and field-effect transistors.

    Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground.

16. Always connect a test instrument's ground lead to the instrument chassis ground *before* connecting the positive lead; always remove the instrument's ground lead last.

1-2 Special Servicing Precautions (Continued)

17. When checking the continuity of the witches or transformer, always make sure that the power is OFF, and one of the lead wires is disconnected.
18. Components that are critical for safety are indicated in the circuit diagram by shading, ⚠ or ⚠ .
19. Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

1-3 Special High Voltage Precautions

1. High Voltage Warning
   Do not attempt to measureany of the high voltages--this includes the filament voltage of the magnetron. High voltage is present during any cook cycle.

   Before touching any components or wiring, always unplug the oven and discharge the high voltage capacitor (See Figure 1-1)

2. The high-voltage capacitor remains charged about 30 seconds after disconnection. Short the negative terminal of the high-voltage capacitor to to the oven chassis. (Use a screwdriver.)

3. High voltage is maintained within specified limits by close-tolerance, safety-related components and adjustments. If the high voltage exceeds the specified limits, check each of the special components.

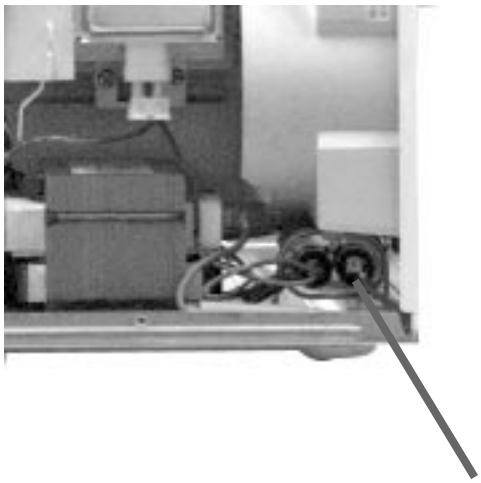

Fig. 1-1. Discharging the High Voltage Capacitor

2. Specifications

2-1 Table of Specifications

TIMER	99 MINUTES 90 SECONDS
POWER SOURCE	230V 50Hz, AC
POWER CONSUMPTION	MICROWAVE : 1,200W
OUTPUT POWER	FROM 100 TO 800W
	(IEC-705 TEST PROCEDURE)
OPERATING FREQUENCY	2,450MHz
MAGNETRON	OM75SH(31)
COOLING METHOD	COOLING FAN MOTOR
OUTSIDE DIMENSIONS	489(W) x 275(H) x 351(D)

2-2 Comparison Chart

MODEL / FEATURE	M1732 / M1733
HOLD TIMER	O (M1733)
MORE/LESS	–
AUTO COOK/DISH	–
AUTO DEFROST	O
TIME COOK	O
POWER LEVEL	O
INSTANT COOK	O
MEMORY	–
BOOST	O
CHILD LOCK	–
CLOCK	O
GRILL	–
COMBI	–

3. Operating Instructions

3-1 Control Panel

1. Clock Setting
2. Instant Reheat Selection
3. Weight Selection
4. Auto Deforst Feature Selection
5. Timer Setting and Serving Selection
6. Microwave Mode Selection
7. Start Button
8. Stop/Cancel Button

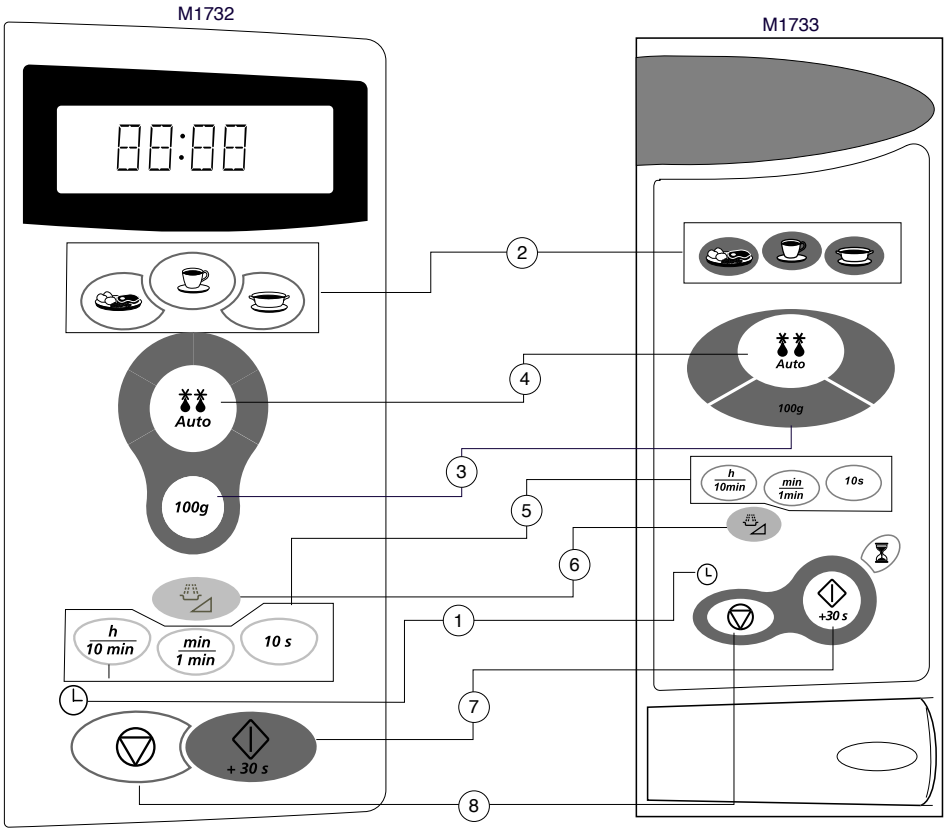

3-2 Features & External Views

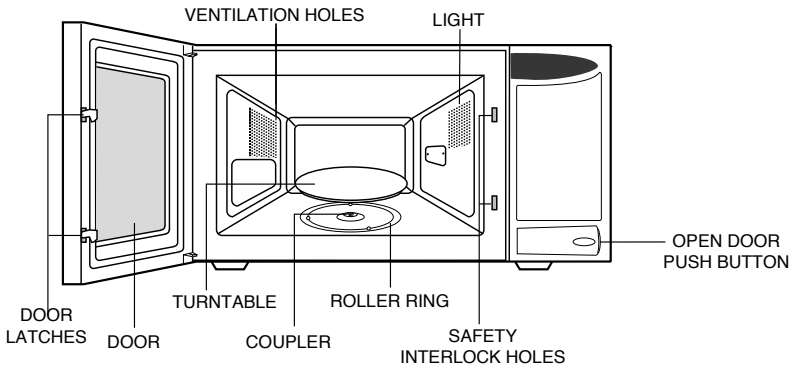

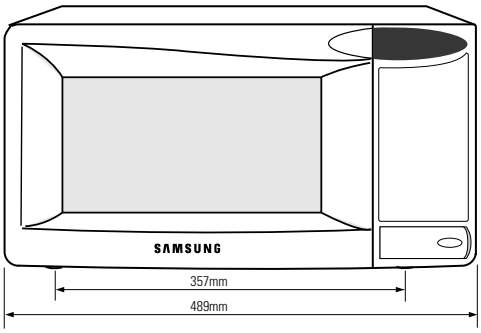

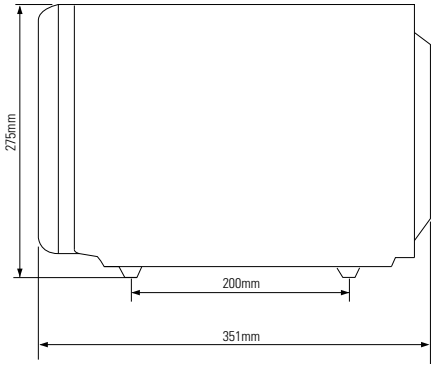

4. Disassembly and Reassembly

4-1 Replacement of Magnetron, Motor Assembly and Lamp

Remove the magnetron including the shield case, permanent magnet, choke coils and capacitors (all of which are contained in one assembly).

1. Disconnect all lead wires from the magnetron and lamp.
2. Remove a screw securing air cover.
3. Remove the air cover.
4. Remove screws securing the magnetron to the wave guide.
5. Take out the magnetron very carefully.
6. Remove nuts from the back panel.
7. Take out the fan motor.
8. Remove the oven lamp by rotating to pull out from hole of air cover.

NOTE1: When removing the magnetron, make sure that its antenna does not hit any adjacent parts, or it may be damaged.

NOTE2: When replacing the magnetron, be sure to remount the magnetron gasket in the correct position and make sure the gasket is in good condition.

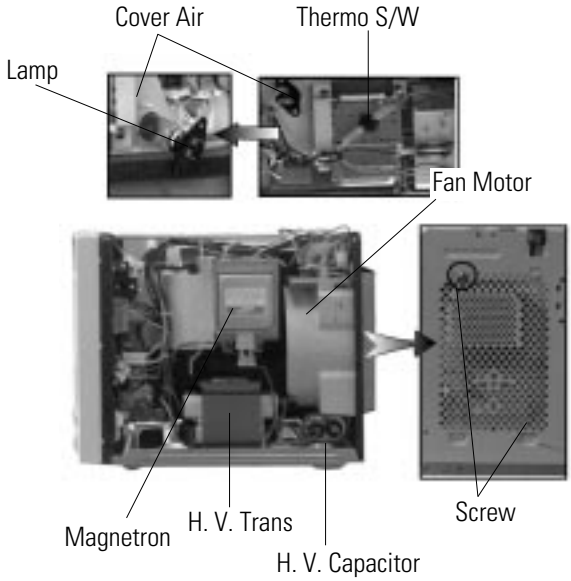

4-2 Replacement of High Voltage Transformer

1. Discharge the high voltage capacitor.
2. Disconnect all the leads wire.
3. Remove the mounting bolts.
4. Reconnect the leads correctly and firmly.

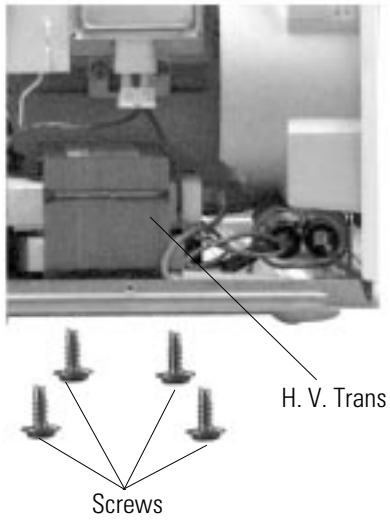

4-3 Replacement of Door Assembly

4-3-1 Removal of Door "C"

Insert flat screwdriver into the gap between Door "A" and Door "C" to remove Door "C". Be careful when handling Door "C" because it is fragile. Then remove the door assembly.

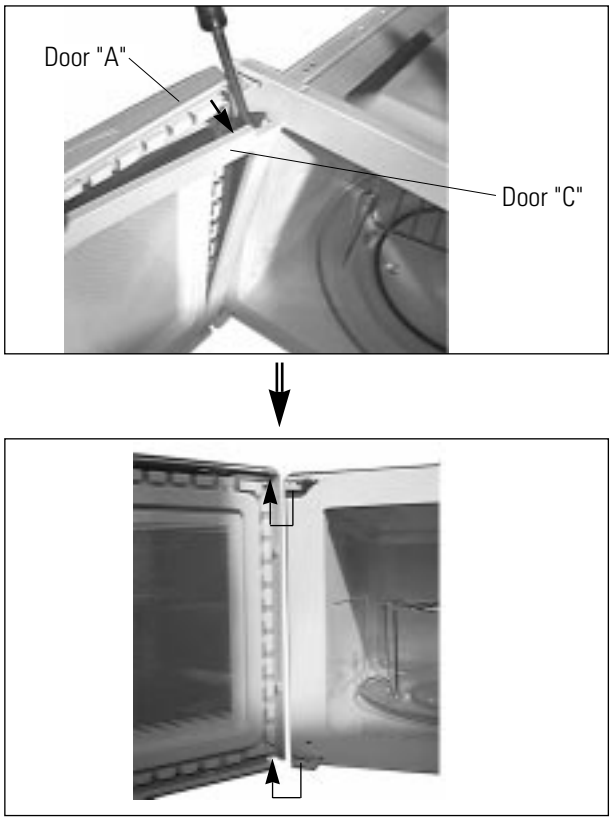

4-3-2 Removal of Door "E"

Following the procedure as shown in the figure, insert and bend a thin metal plate between Door "E" and Door "A" until you hear the 'tick' sound.

- Insertion depth of the thin metal plate should be 0.5mm or less.

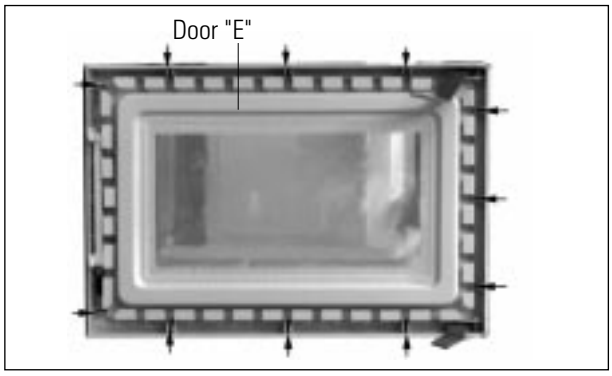

4-3-3 Removal of Key Door & Spring

Remove pin hinge from Door "E"
Detach spring from Door "E" and key door.

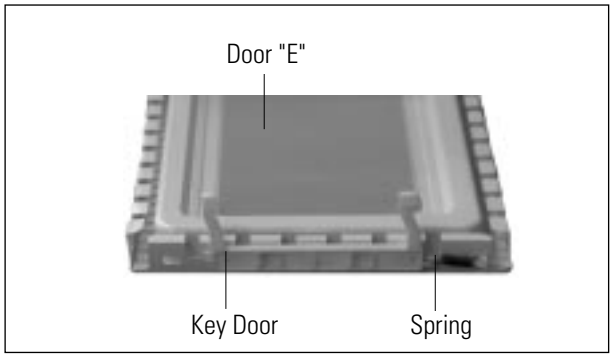

4-3-5 Reassembly Test

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave energy may leak from the space between the door and oven.
3. Do the microwave leakage test.

4-4 Replacement of Fuse

1. Disconnect the oven from the power source.
2. When 15A fuse blows out by the operation of interlock monitor switch failure, replace the primary interlock switch, door sensing switch, monitor switch and power relay.
3. When the above three switches operate properly, check if any other part such as the control circuit board, blower motor or high voltage transformer is defective.

4-5 Replacement of Drive Motor

1. Take out the glass tray, guide roller and coupler from cavity.
2. Turn the oven upside down to replace the drive motor.
3. Remove a screw securing the drive motor cover.
4. Disconnect all the lead wires from the drive motor.
5. Remove screws securing the drive motor to the cavity.
6. Remove the drive motor.
7. When replacing the drive motor, be sure to remount it in the correct position.
8. Connect all the leads to the drive motor.
9. Screw the deive motor cover to the base plate with a screw driver.
10. Remount the coupler in the correct position.

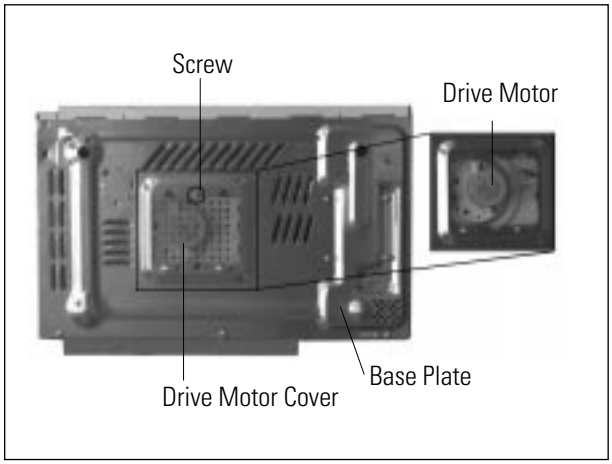

4-6 Replacement of Control Circuit Board

4-6-1 Removal of Control Box Assembly

1. Be sure to ground any static electric charge in your body and never touch the control circuit.
2. Disconnect the connectors from the control circuit board.
3. Remove screws securing the control box assembly.
4. Remove the screw securing the ground tail of the keyboard.

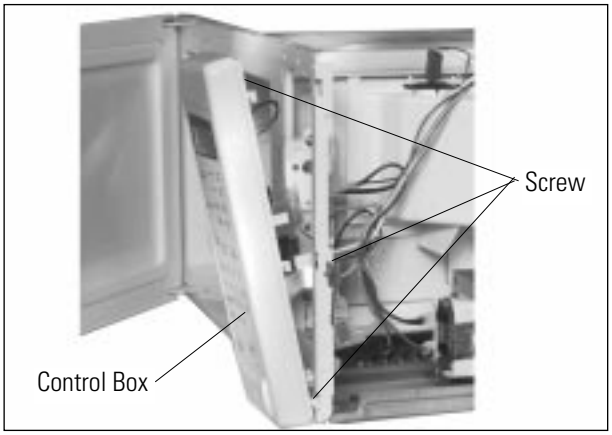

4-6-2 Removal of P.C.B Assembly

1. Pull the lever end of the plastic fastener and remove the Flexible Printed Circuit(FPC) of membrane panel.
2. Remove screw securing the control circuit board.
3. Lift up the control circuit board from the Ass'y control box.
4. When reconnecting the FPC connector, make sure that the holes on the connector are properly engaged with the hooks on the Plastic Fastener.

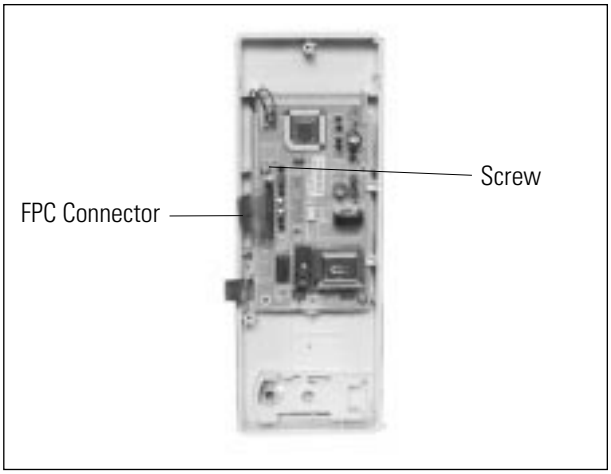

4-6-3 Removal of Window Display & Membrane Panel

1. Window display should not be disassembled as its mounting tabs will be broken. If repair work is difficult, replace with Ass'y control panel.
2. The membrane key board is attached to the escutcheon base with doublefaced adhesive tape. Therefore, applying hot air such as using of hair dryer is recommended for smoother removal.
3. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided.

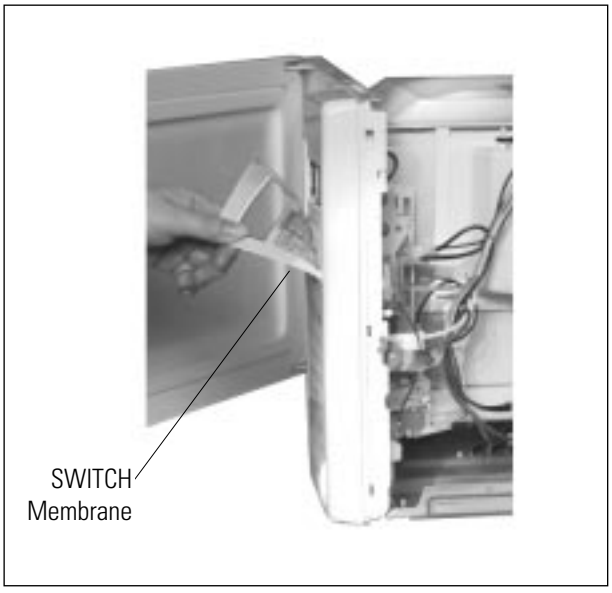

5. Alignment and Adjustments

PRECAUTION

1. High voltage is present at the high voltage terminals during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

5-1 High Voltage Transformer

1. Remove connectors from the transformer terminals and check continuity.
2. Normal resistance readings are as follows:

MODEL	M1732 / M1733
Secondary	Approx. 123Ω
Filament	Approx.0Ω
Primary	Approx.1.8Ω

(Room temperature = 20˚C)

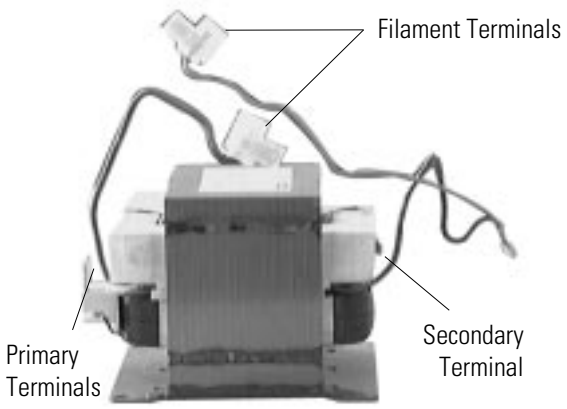

5-2 Low Voltage Transformer

1. The low voltage transformer is located on the control circuit board.
2. Remove the low voltage transformer from the PCB Ass'y and check continuity.
3. Normal resistor reading is shown in the table.

Terminals	Resistance
1~2(Input)	1,201Ω
3~4(Output 7V)	4.348Ω
5~6(Output17V)	21.72Ω

5-3 Magnetron

1. Continuity checks can indicate only an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron :
2. Isolate the magnetron from the circuit by disconnecting its leads.
3. A continuity check across the magnetron filament terminals should indicate one ohm or less.
4. A continuity check between each filament terminal and magnetron case should read open.

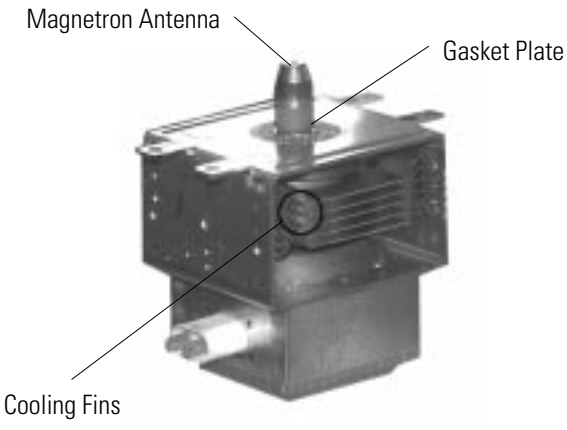

5-4 High Voltage Capacitor

1. Check continuity of the capacitor with the meter set at the highest resistance scale.
2. Once the capacitor is charged, a normal capacitor shows continuity for a short time, and then indicates 9MΩ.
3. A shorted capacitor will show continuous continuity.
4. An open capacitor will show constant 9MΩ.
5. Resistance between each terminal and chassis should read infinite.

5-5 High Voltage Diode

1. Isolate the diode from the circuit by disconnecting its leads.
2. With the ohm-meter set at the highest resistance scale, measure across the diode terminals. Reverse the meter leads and read the resistance. A meter with 6V, 9V or higher voltage batteries should be used to check the front-to back resistance of the diode (otherwise an infinite resistance may be read in both directions). The resistance of a normal diode will be infinite in one direction and several hundred KΩ in the other direction.

5-6 Main Relay and Power Control Relay

1. The relays are located on the PCB Ass'y. Isolate them from the main circuit by disconnecting the leads.
2. Operate the microwave oven with a water load in the oven. Set the power level set to high.
3. Check continuity between terminals of the relays after the start pad is pressed.

5-7 Adjustment of Primary Switch, Door Sensing Switch and Monitor Switch

Precaution

For continued protection against radiation hazard, replace parts in accordance with the wiring diagram and be sure to use the correct part number for the following switches: Primary and secondary interlock switches, and the interlock monitor switch (replace all together). Then follow the adjustment procedures below. After repair and adjustment, be sure to check the continuity of all interlock switches and the interlock monitor switch.

1. When mounting Primary switch and Interlock Monitor switch to Latch Body, consult the figure.
2. No specific adjustment during installation of Primary switch and Monitor switch to the latch body is necessary.
3. When mounting the Latch Body to the oven assembly, adjust the Latch Body by moving it so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the Latch Body to the oven assembly.
4. Reconnect to Monitor switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.
5. Confirm that the gap between the switch housing and the switch actuator is no more than 0.5mm when door is closed.

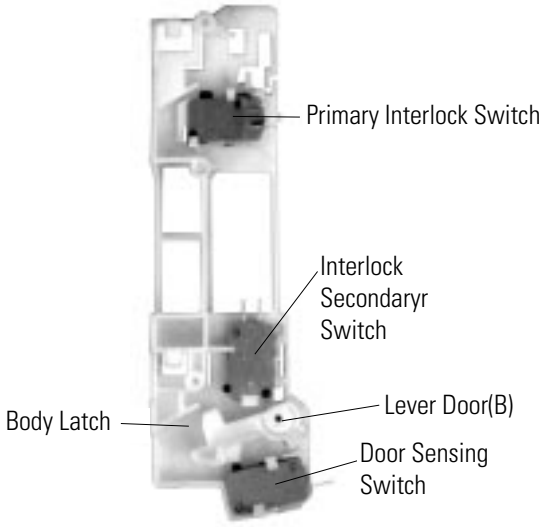

	Door Open	Door Closed
Primary switch	∞	0
Monitor switch (COM-NC)	0	∞
Monitor switch (COM-NO)	∞	0
Door Sensing S/W	∞	0

5-8 Output Power of Magnetron

CAUTION
MICROWAVE RADIATION

PERSONNEL SHOULD NOT ALLOW EXPOSURE TO MICROWAVE RADIATION FROM MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

The output power of the magnetron can be measured by performing a water temperature rise test.
Equipment needed :
* Two 1-liter cylindrical borosilicate glass vessel (Outside diameter 190 mm)
* One glass thermometer with mercury column
NOTE: Check line voltage under load. Low voltage will lower the magnetron output. Make all temperature and time tests with accurate equipment.
1. Fill the one liter glass vessel with water.
2. Stir water in glass vessel with thermometer, and record glass vessel's temperature ("T1", 10±1˚C).
3. After moving the water into another glass vessel, place it in the center of the cooking tray. Set the oven to high power and operate for 55 seconds exactly. (2 seconds included as a holding time of magnetron oscillation:)
4. When heating is finished, stir the water again with the thermometer and measure the temperature ("T2").
5. Subtract T1 from T2. This will give you the water temperature rise. (ΔT)
6. The output power is obtained by the following formula;

$$\text{Output Power} = \frac{4.187 \times 1000 \times \Delta T}{52}$$

52 : Heating Time (sec)
4.187 : Coefficient for Water
1000 : Water (cc)
ΔT : Temperature Rise (T2-T1)

* Output (W) = 100 x ΔT

7. Normal temperature rise for this model is 9˚C to 11˚C at 'HIGH'.
NOTE 1: Variations or errors in the test procedure will cause a variance in the temperature rise. Additional power test should be made if temperature rise is marginal.
NOTE 2: Output power in watts is computed by multiplying the temperature rise (step E) by a factor of 91 times the of centigrade temperature.

5-9 Microwave Heat Distribution - Heat Evenness

The microwave heat distribution can be checked indirectly by measuring the water temperature rise at certain positions in the oven:

1. Prepare five beakers made of 'Pyrex', having 100 milliliters capacity each.
2. Measure exactly 100milliliters off water load with a measuring cylinder, and pour into each beaker.
3. Measure the temperature of each water load. (Readings shall be taken to the first place of decimals.)
4. Put each beaker in place on the cooking tray as illustrated in figure below. Start heating.
5. After heating for 2 minutes, measure the water temperature in each beaker.
6. Microwave heat distribution rate can be calculated as follows:

$$\text{Heat Distribution} = \frac{\text{Minimum Temperature Rise}}{\text{Maximum Temperature Rise}} \times 100(\%)$$

The result should exceed 65%.

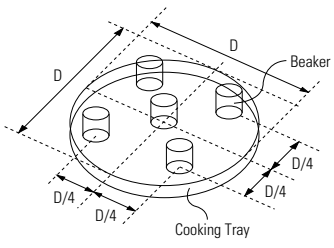

5-10 Procedure for Measurement of Microwave Energy Leakage

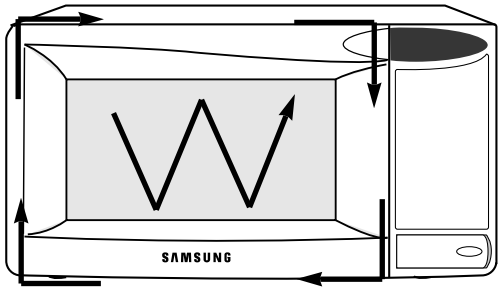

1) Pour 275±15cc of 20±5˚C(68±9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
2) Start to operate the oven and measure the leakage by using a microwave energy survey meter.
3) Set survey meter with dual ranges to 2,450MHz.
4) When measuring the leakage, always use the 2 inch spacer cone with the probe. Hold the probe perpendicular to the cabinet door. Place the spacer cone of the probe on the door and/or cabinet door seam and move along the seam, the door viewing window and the exhaust openings moving the probe in a clockwise direction at a rate of 1 inch/sec. If the leakage testing of the cabinet door seam is taken near a corner of the door, keep the probe perpendicular to the areas making sure that the probe end at the base of the cone does not get closer than 5cm to any metal. If it gets closer than 5cm, erroneous readings may result.
5) Measured leakage must be less than 4mW/cm^2, after repair or adjustment.

Maximum allowable leakage is 5mW/cm^2.
4mW/cm^2 is used to allow for measurement and meter accuracy

5-11 Check for Microwave Leakage

1. Remove the outer panel.
2. Pour 275±15cc of 20±5˚C(68±9˚F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
3. Start the oven at the highest power level.
4. Set survey meter dual ranges to 2,450MHz.
5. Using the survey meter and spacer cone as described above, measure arnear the opening of magnetron, the surface of the air guide and the surface of the wave guide as shown in the following photo.(but avoid the high voltage components.) The neading should be less than 4mW/cm^2.

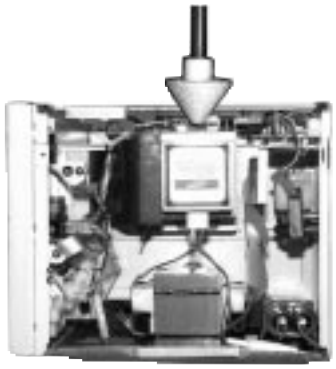

5-12 Note on Measurement

1) Do not exceed the limited scale.
2) The test probe must be held on the grip of the handle, otherwise a false reading may result when the operator's hand is between the handle and the probe.
3) When high leakage is suspected, do not move the probe horizontally along the oven surface; this may cause damage to the probe.
4) Follow the recommendation of the manufacturer of the microwave energy survey meter.

5-13 Leakage Measuring Procedure

5-13-1 Record keeping and notification after measurement

1) After adjustment and repair of a radiarion preventing device, make a repair record for the measured values, and keep the data.
2) If the radiation leakage is more than 4 mW/cm^2 after determining that all parts are in good condition, functioning properly and the identical parts are replaced as listed in this manual notift that fact to ;

CENTRAL SERVICE CENTER

5-13-2 At least once a year have the microwave energy survey meter checked for accuracy by its manufacturer.

6. Troubleshooting

PRECAUTION

1. CHECK GROUNDING BEFORE CHECKING FOR TROUBLE.
2. BE CAREFUL OF THE HIGH VOLTAGE CIRCUIT.
3. DISCHARGE THE HIGH VOLTAGE CAPACITOR.
4. WHEN CHECKING THE CONTINUITY OF THE SWITCHES OR TRANSFORMER, DISCONNECT ONE LEAD WIRE FROM THESE PARTS AND THEN CHECK CONTINUITY WITHOUT THE POWER SOURCE ON. TO DO OTHERWISE MAY RESULT IN A FALSE READING OR DAMAGE TO YOUR METER.
5. DO NOT TOUCH ANY PART OF THE CIRCUIT OR THE CONTROL CIRCUIT BOARD, SINCE STATIC DISCHARGE MAY DAMAGE IT. ALWAYS TOUCH GROUND WHILE WORKING ON IT TO DISCHARGE ANY STATIC CHARGE BUILT UP.

6-1 Electrical Maltunction

SYMPTOM	CAUSE	CORRECTIONS
Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness 2. Open thermal cutout (Magnetron) 3. Open low voltage transformer 4. Defective Ass'y PCB	Check fan motor when thermal cutout is defective. Check Ass'y PCB when LVT is defective.
No display and no operation at all. Fuse is blown.	1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective monitor switch (NOTE1) 4. Shorted HVCapacitor 5. Shorted HVTransformer (NOTE2)	Check adjustment of primary, interlock monitor, power relay, door sensing switch.
	NOTE 1: All of these switches must be replaced at the same time. (refer to adjustment instructions) Check continuity of power relay contacts and if it has continuity, replace power relay also. NOTE 2: When HVTransformer is replaced, check diode and magnetron also.	
Oven does not accept key input (Program)	1. Key input is not in-Sequence 2. Open or loose connection of membrane key pad to Ass'y PCB 3. Shorted or open membrane panel 4. Defective Ass'y PCB	Refer to operation procedure. Replace PCB main.
Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on.)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to lower output and/or intermittent oscillation. 3. Defective high voltage components H.V.Transformer H.V.Capacitor H.V.Diode, H.V.Fuse Magnetron 4. Open or loose wiring of power relay 5. Defective primary latch switch 6. Defective power relay or Ass'y PCB	Adjust door and latch switches. Check high voltage component according to component test procedure and replace if it is defective. Replace PCB main.

6-1 Electrical Maltunction(continved)

SYMPTOM	CAUSE	CORRECTIONS
Oven lamp and fan motor turn on	1. Misadjustment or loose wiring of primary latch switch 2. Defective primary latch switch	Adjust door and latch switches.
Oven can program but timer does not start.	1. Open or loose wiring of secondary interlock switch 2. Off-alignment of primary interlock 3. Defective secondary interlock S/W	Adjust door and interlock switches.
Microwave output is low;. Oven takes longer time to cook food.	1. Decrease in power source voltage. 2. Open or loose wiring of magnetron filament circuit. (Intermittent oscillation)) 3. Aging of magnetron	Consult electrician.
Fan motor turns on when plugged in	Loose wiring of door sensing switch	Check wire of door sensing switch.
Oven does not operate and return to the plugged in mode.	Defective Ass'y PCB	Replace PCB main.
Loud buzzing noise can be heard.	1. Loose fan and fan motor 2. Loose screws on H.V.Transformer 3. Shorted H.V.Diode	Tighten screws of fan motor. Tighten screws of H.V.Transformer. Replace H.V.Diode.
Turntable motor does not rotate.	1. Open or loose wiring of turntable motor. 2. Defective turntable motor.	Replace turntable motor.
Oven stops operation during cooking	1. Open or loose wiring of primary interlock switch 2. Operation of thermal cutout(Magnetron)	Adjust door and latch switches.
Sparks	1. Metallic ware or cooking dishes touching on the oven wall. 2. Ceramic ware trimmed with gold or silver powder also causes sparks.	Inform the customer. Do not use any type of cookware with metallic trimming.
Uneven cooking	Uneven intensity of microwave due to its characteristics.	Wrap thinner parts of the food with aluminum foil. Use plastic wrap or cover with a lid. Stir once or twice while cooking foods such as soup, cocoa, or milk.
Noise from the turntable motor when it starts to operate.	Noise may result from the motor.	Replace turntable motor.

7. Exploded Views and Parts List

7-1 Exploded Views

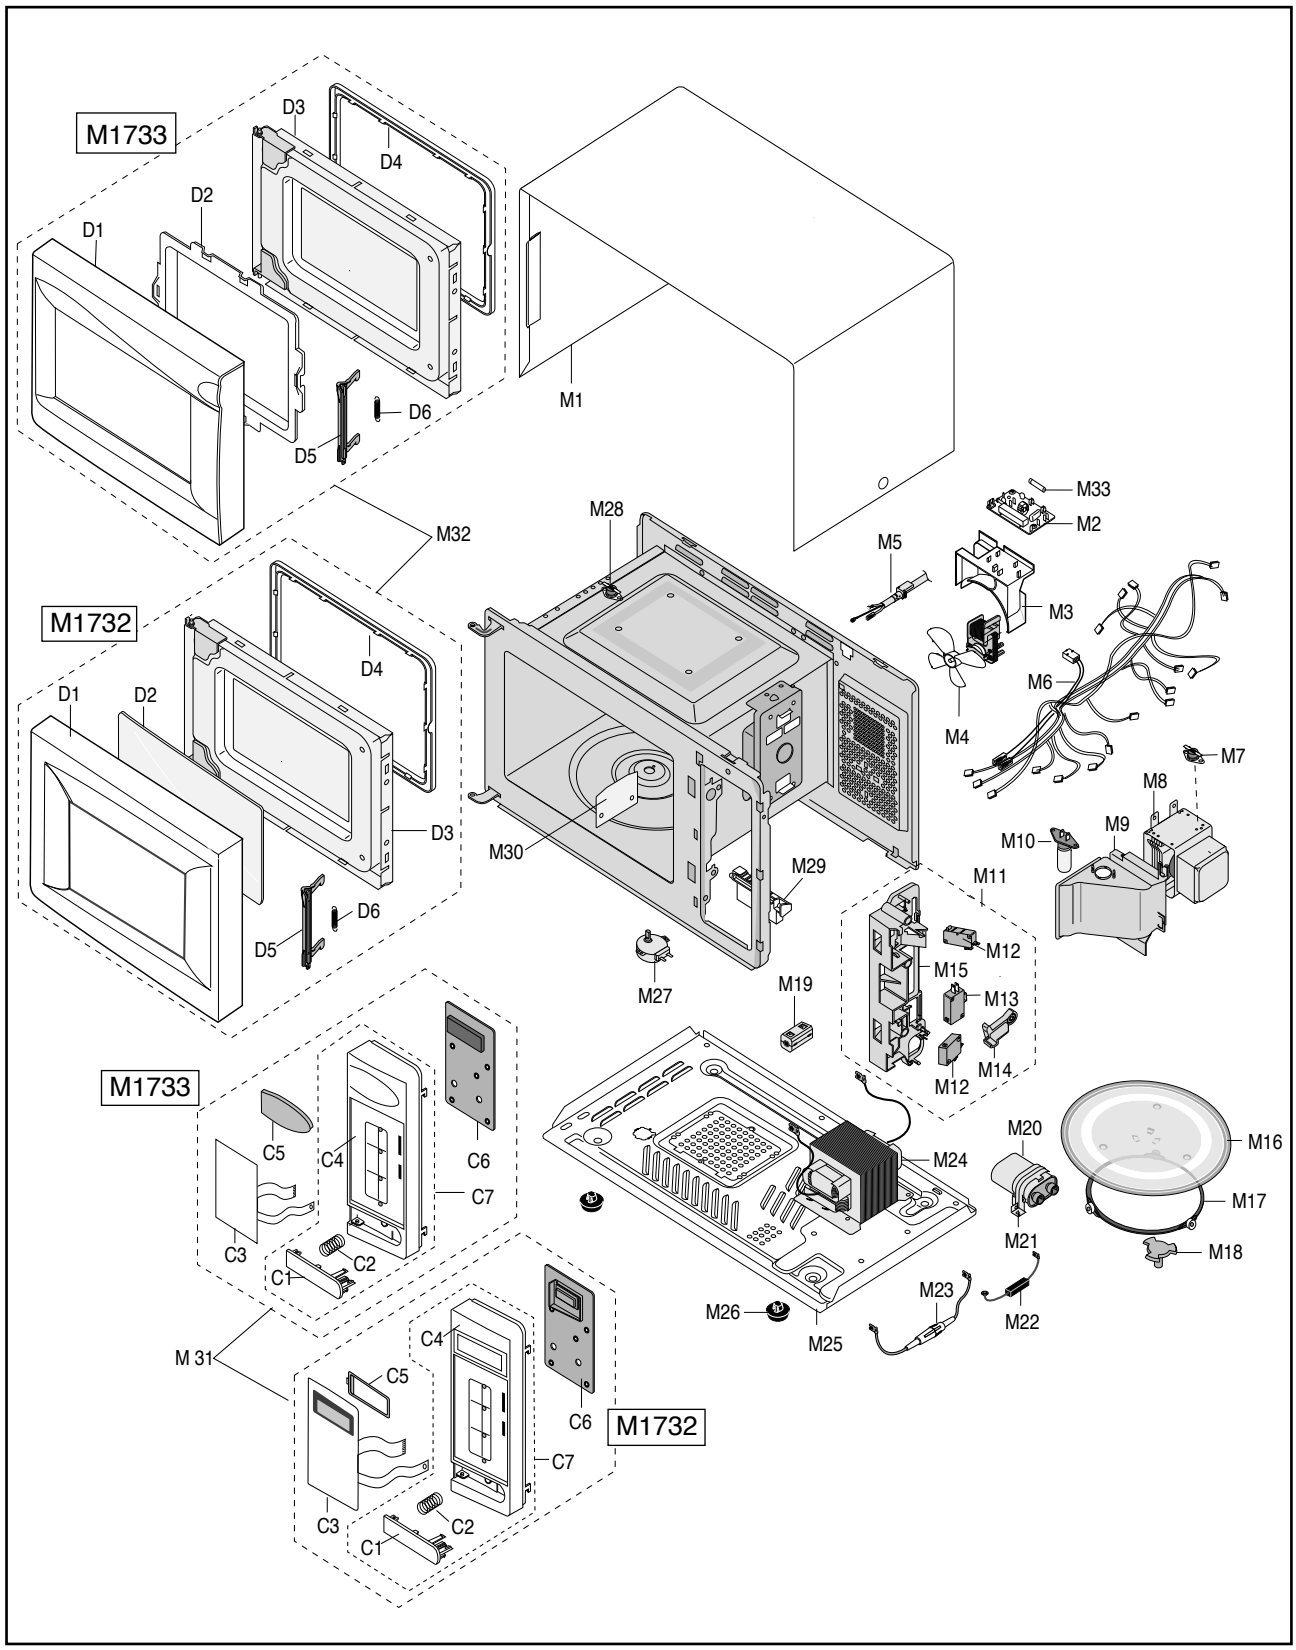

7-2 Main Parts List M1732 (WHITE / GRAY) / M1733 (WHITE / GRAY)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
M 1	DE70-30116W	PANEL-OUTER;SECC,T0.5,W351.7,L1014.7,WHT,M	1	WHITE
M 1	DE70-30135N	PANEL-OUTER;GRY,3RD-0.7,MW4593G	1	GRAY
M 2	DE96-00007A	ASSY NOISE FILTER;SN-3WEA,250V10A,3W INRUSH TC	1	
M 3	DE71-60467A	COVER-BLOWER;PP,-,-,-,-,3RD-0.7	1	
M 4	DE96-00031A	ASSY MOTOR-FAN;SMF-3RDEA,230V50HZ,2400RPM,M1733	1	
M 5	DE39-20145A	ASSY POWER CORD;MOONSUNG,-,230V50Hz,-,-,-,M308	1	
M 6	DE39-00020A	WIRE HARNESS-A;M1733	1	
M 7	DE47-20009A	THERMOSTAT;PW2N-520PB,160/60,250V/7.5A,H,	1	MGT
M 8	DE03-30029A	MAGNETRON;OM75SH(31)ESS	1	⚠
M 9	DE71-60457A	COVER-AIR;PP,T1.7,W115.5,L150,WHT,3RD-W0	1	
M10	4713-001004	LAMP-INCANDESCENT;230V,-,40W,ORG,-,-,25x71mm	1	
M11	DE93-20101A	ASSY BODY LATCH;3RD-0.7,P/BUTTON,PP	1	
M12	3405-000178	SWITCH-MICRO;250V,15A,200gf,SPST-NO	2	
M13	3405-000175	SWITCH-MICRO;250V,15A,200gf,SPST-NO	1	
M14	DE66-90114A	LEVER-S/W;PP(FB53WH),-,-,-,3.5G,NTR,3RD-W MW5592W	1	
M15	DE66-40001C	LATCH-BODY;PP(FB53WH),-,39.2G,NTR,-,3RD-W MW5592W	1	
M16	DE74-20102B	TRAY-COOKING;GLASS,T5.0,PI288,780G,M745	1	
M17	DE92-90436C	ASSY-GUIDE ROLLER;MW4370W,D16.5,XAREX	1	
M18	DE67-60075A	COUPLER;PPS,7G,BRN,M97G45	1	
M19	DE73-90027A	FERRITE-CORE;NI-ZN,T13.8,W21.0,L28.0,BNF-14	1	
M20	2501-001011	C-OIL;910nF,2100V,BK,54x35x75mm,20mm	1	
M21	DE61-50106A	BRACKET-HVC;SECC,T0.8,W31,L125.8,	1	
M22	DE59-40001A	DIODE-H.V;HVR-1X-32B-12	1	
M23	DE91-70061B	ASSY-H.V.FUSE;THV060T-0750-H,5KV0.75A,RED	1	
M24	DE26-10158A	TRANS-H.V;SHV-173EC,230V,2220/3.40V,50Hz	1	⚠
M25	DE80-10003B	BASE-PLATE;SGCC1-Z,T0.8,W340,L550,3RD-0.7	1	
M26	DE61-40017A	FOOT;PP(A353),BLK,MW5630T,	2	
M27	DE31-10154A	MOTOR-DRIVE;M2HJ49ZR02,ST-16,50/60HZ,-	1	
M28	DE47-20173A	THERMOSTAT;PW-2N(90/60)30,187Y,250V7.5A,9	1	CAVITY
M29	DE66-90113A	LEVER-DOOR;PP(TB53-GH10),T2.5,W31X100.5,-,12G,NTR,3RD-W	1	
M30	DE71-60450B	COVER-MGT;PP,T2,W110.5,L109,-,28G,3RD-0.7	1	
M31	DE94-00085A	ASSY CONTROL-BOX;230V50HZ,M1732/XEG,WHT,3RD S1	1	M1732-WHITE ⚠
M31	DE94-00085B	ASSY CONTROL-BOX;230V50HZ,M1732-D/AMF,D/GRAY,3RD-S1	1	M1732-GRAY ⚠
M31	DE94-00088A	ASSY CONTROL-BOX;230V50HZ,M1733/XEG,3RD-0.7CU.FT(S2)	1	M1733-WHITE ⚠
M31	DE94-00088C	ASSY CONTROL-BOX;230V50HZ,M1733-D/AMF,D/GRAY,3RD-S2	1	M1733-GRAY ⚠
M32	DE94-00086A	ASSY DOOR;M1732/XEG,P/WHT,3RD-0.7CU.FT(S1)	1	M1732-WHITE ⚠
M32	DE94-00086B	ASSY DOOR;M1732-D/AMF,D/GRAY,3RD-S1	1	M1732-GRAY ⚠
M32	DE94-00089A	ASSY DOOR;M1733/XEG,P/WHT,3RD-0.7CU.FT(S2)	1	M1733-WHITE ⚠
M32	DE94-00089G	ASSY DOOR;M1733-D/AMF,D/GRAY,3RD-S2	1	M1733-GRAY ⚠
M33	3601-000448	FUSE-FERRULE;250V,10A,SLOW-BLOW,CERAMIC,6.3	1	

● : Option Parts ⚠ : Warning ⚠ :Electrostatically Sensitive Devices

7-3 Door Parts List M1732 (WHITE / GRAY)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
D 1	DE64-40316B	DOOR-A;TDS,-,-,-,-,M1732/12	1	WHITE
D 1	DE64-40316D	DOOR-A;ABS,-,-,200G,D/GRY,M1732-D/AMF,3RD-S1	1	GRAY
D 2	DE67-20196A	SCREEN-DOOR;S1,-,-,-,-,3RD-0.7	1	⚠
D 3	DE94-00124B	ASSY DOOR-SUB;MW4593G,BLK,3RD-0.7	1	
D 4	DE64-40008B	DOOR-C;PP,T1.5,BLK,CE745G	1	
D 5	DE64-40006A	DOOR-KEY;POM(TC3005),T2.0,12GR,BLK,CE94	1	
D 6	DE61-70033A	SPRING-KEY;ES,HSWR10,PI0.6,D6.0,L22.3,BLU	1	

7-3 Door Parts List M1733 (WHITE / GRAY)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
D 1	DE64-40322A	DOOR-A;ABS,-,-,200G,-,CE2733/XEG,S2-DESIGN	1	WHITE
D 1	DE64-40322G	DOOR-A;ABS,-,-,200G,-,M1713-D/XEF,3RD-S2	1	GRAY
D 2	DE67-20186A	SCREEN-DOOR;SAN,T2.2,W354,L224,SMOG,3RD-0.7CU.FT	1	⚠
D 3	DE94-00124B	ASSY DOOR-SUB;MW4593G,BLK,3RD-0.7	1	
D 4	DE64-40008B	DOOR-C;PP,T1.5,BLK,CE745G	1	
D 5	DE64-40006A	DOOR-KEY;POM(TC3005),T2.0,12GR,BLK,CE94	1	
D 6	DE61-70033A	SPRING-KEY;ES,HSWR10,PI0.6,D6.0,L22.3,BLU	1	

7-4 Control Parts List M1732 (WHITE / GRAY)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE66-20275A	BUTTON-PUSH;ABS(HR0370U),-,9G,P/WHT(W9501),3RD-W S1 MW5592W	1	WHITE
C 1	DE66-20275C	BUTTON-PUSH;ABS(V0),-,-,GRY,MW4593G	1	GRAY
C 2	DE61-70076A	SPRING-BUTTON;HSWR,PI0.6	1	
C 3	DE34-00008A	SWITCH-MEMBRANE;PET,M1712/XEG,3RD S1,-,230V50HZ	1	WHITE
C 3	DE34-00008B	SWITCH-MEM BRANE;PET,M1732-D/AMF,-,-,-,-,-,3RD-S1,D/GRAY	1	GRAY
C 4	DE72-70201B	CONTROL-PANEL;ABS(HR0370D),M1732,S1-DESIGN,-,-,-,-,P/WHT(W9501)	1	WHITE
C 4	DE72-70201D	CONTROL-PANEL;M1732-D/AMF,-,-,-,-,D/GRAY,3RD-S1	1	GRAY
C 5	DE67-40179A	WINDOW-DISPLAY;SAN,T2.0,-,-,SMOG,-,3RD-W S1	1	
C 6	DE97-00027A	ASSY PCB-MAIN;RC-W3LED-00,M1733	1	⚠
C 7	DE93-30587B	ASSY CONTROL-PANEL;230V50HZ,M1732,P/WHT,S1-DESIGN	1	WHITE
C 7	DE93-30587D	ASSY CONTROL-PANEL;230V50HZ,M1732-D/AMF,D/GRAY,3RD-S1	1	GRAY

7-4 Control Parts List M1733 (WHITE / GRAY)

Ref. No.	Parts No.	Description/Specification	Q'ty	Remarks
C 1	DE66-20281A	BUTTON-PUSH;ABS,15g,T2x37x86,WHT,3RD-W B D	1	WHITE
C 1	DE66-20281E	BUTTON-PUSH;ABS,T2X37X86,15G,D/GRY,M1733-D/AMF	1	GRAY
C 2	DE61-70076A	SPRING-BUTTON;HSWR,PI0.6	1	
C 3	DE34-00004A	SWITCH MEMBRANE;PET,M1733,230V50HZ,T1.0X89.6X182.39,-,S/S BASIC	1	WHITE
C 3	DE34-00004B	SWITCH-MEM BRANE;PET,M1733-D/AMF,-,-,-,-,-,D/GRAY	1	GRAY
C 4	DE72-70210A	CONTROL-PANEL;ABS,WHT,100g,-,MW779BW(3RD-0.7	1	WHITE
C 4	DE72-70210B	CONTROL-PANEL;ABS,M1733-D/AMF,-,-,-,100G,D/GRY	1	GRAY
C 5	DE67-40175A	WINDOW-DISPLAY;SAN,-,-,-,SMG,5g	1	
C 6	DE97-00027A	ASSY PCB-MAIN;RC-W3LED-00,M1733	1	⚠
C 7	DE94-00087A	ASSY CONTROL-PANEL;230V50HZ,M1733/XEG,3RD-S2	1	WHITE
C 7	DE94-00087B	ASSY CONTROL-PANEL;230V50HZ,M1733-D/AMF,D/GRAY,3RD-S2	1	GRAY

7-5 Standard Parts List

Parts No.	Description / Specification	Q'ty	Remarks
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	N/P EARTH
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	P/C EARTH
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	PCB EARTH
DE60-10063A	SCREW-TAP TH;TH,M4,L12,FEFN	1	O/PANEL
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	HVT
DE60-10080A	SCREW-WASHER;M5,L12,2S	4	MGT
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	AIR/COVER
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	B/LATCH
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	4	B/PLATE
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	1	C/BLOWER
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	2	C/BOX
DE60-10082H	SCREW-A;2S-4X12,TOOTHED	4	O/PANEL
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	1	CAVITY TCO
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	2	D/MOTOR
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	2	MGT TCO
DE60-30016A	NUT-FLANGE;M4,MSWR10	2	F-MOTOR
DE60-10088A	SCREW-TAP PH;PH,M3,L8,FEFZY,PLAIN	2	PCB
DE60-10098A	SCREW-ASSY TAP TITE;PH,TC,M4X8,SWRCH18A,ZPC2,GLD,W	1	H.V.D
DE60-10012A	SCREW-TAP TITE;TH,+,3,M4,L10,SWR10,ZPC2,TOOTH	1	-

8. P.C.B Diagrams

8-1 P.C.B Diagrams

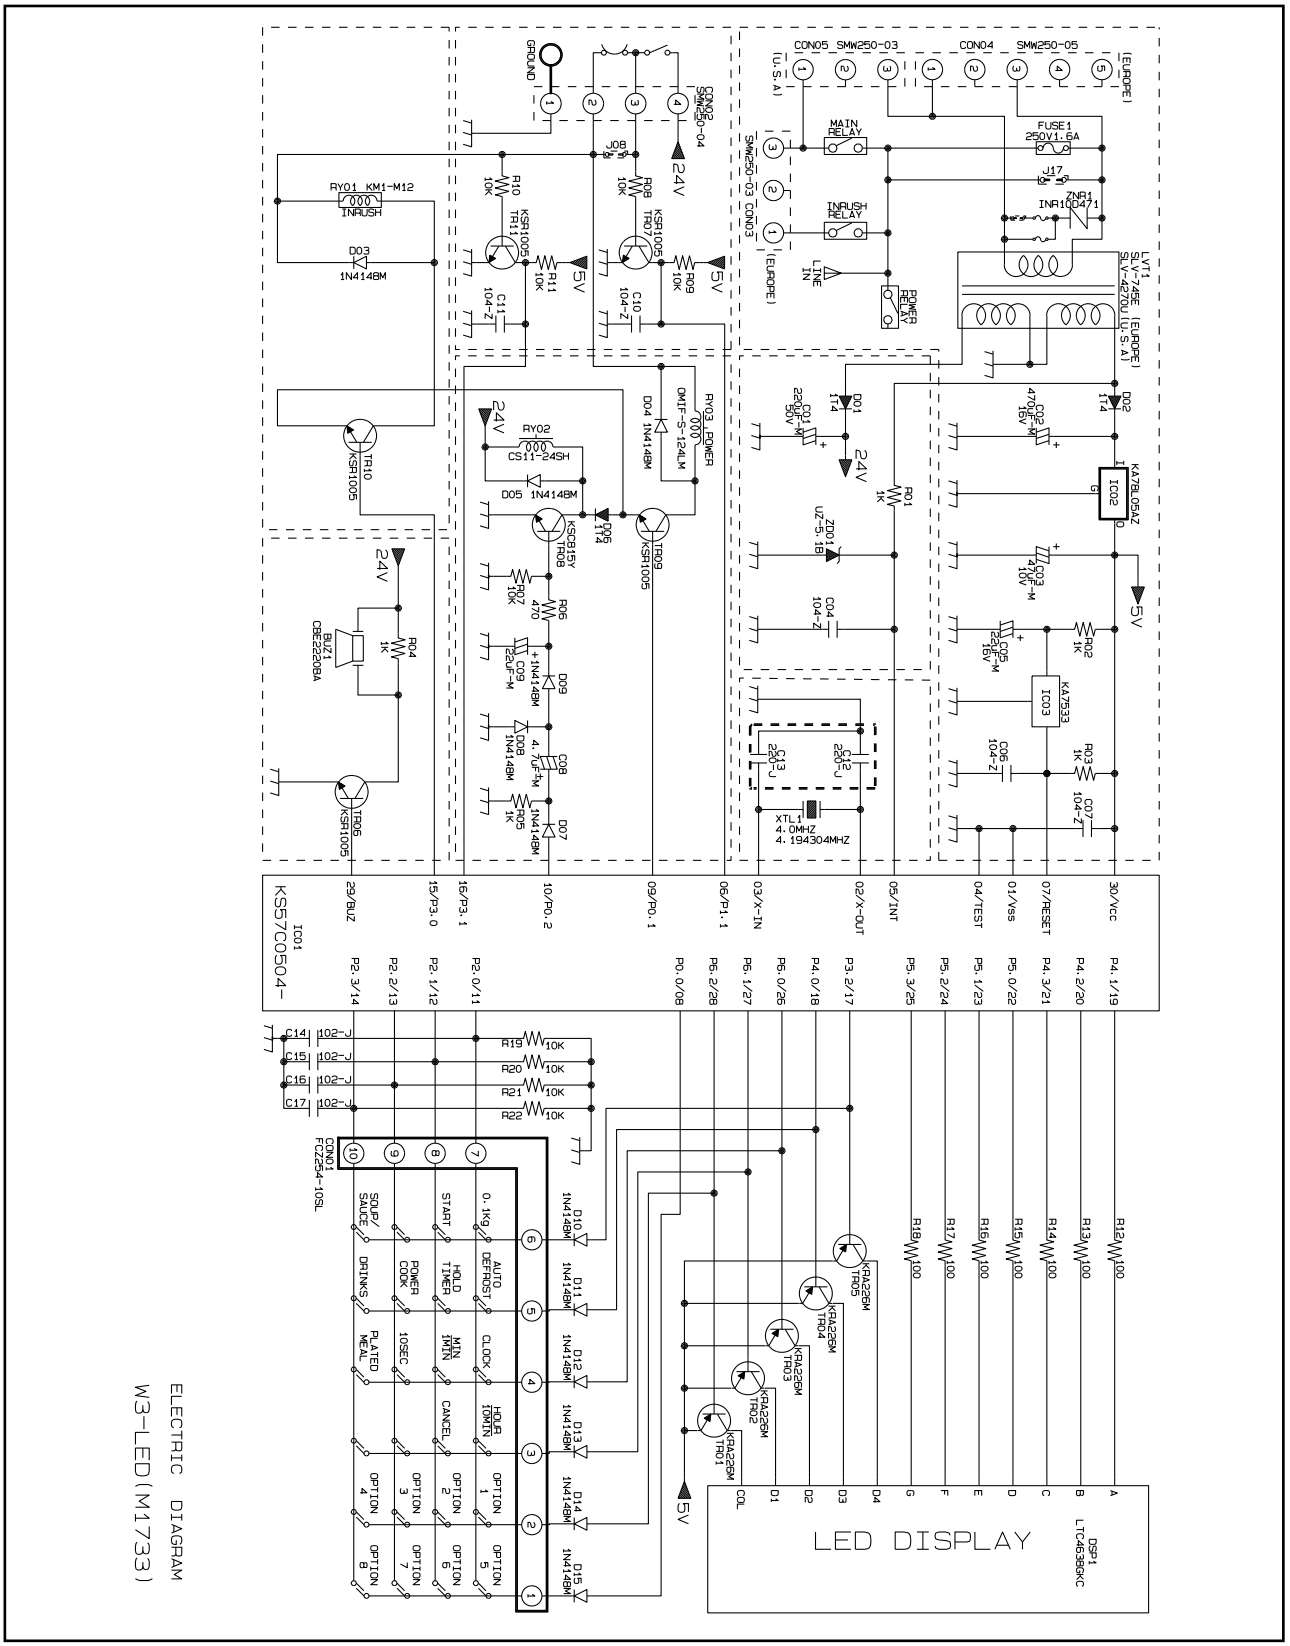

8-2 P.C.B Parts List

No.	Parts No.	Description / Specification	Q'ty	Remarks
P 1	0401-001025	DIODE-SWITCHING;1N4148M,50V,450mA,DO-34,TP	6	D03,D04,D05,D07,D08,D09
P 1	0401-001025	DIODE-SWITCHING;1N4148M,50V,450mA,DO-34,TP	6	D10,D11,D12,D13,D14,D15
P 2	0402-001103	DIODE-RECTIFIER;1T4,400V,1A,TS-1,TP	3	D01,D02,D06
P 3	0403-000355	DIODE-ZENER;UZ5.1BSB,5.1V,4.97-5.18V,500mW	1	ZD01
P 4	0501-000388	TR-SMALL SIGNAL;KSC815,NPN,400mW,TO-92,BK,120-	1	TR08
P 5	0504-001014	TR-DIGITAL;KSR1005,NPN,300MW,4.7K/10K,TO-92,TP	4	TR06,TR07,TR09,TR10
P 6	0504-001044	TR-DIGITAL;KRA226M,PNP,400MW,2.2K/10K,TO-92M,TP	5	TR01,TR02,TR03,TR04,TR05
P 7	1203-000460	IC-POSI.FIXED REG.;78L05,TO-92,3P,-,PLASTIC,4.8/5	1	IC02
P 8	2001-000027	R-CARBON;100OHM,5%,1/4W,AA,TP,2.4X6.4MM	7	R12,R13,R14,R15,R16,R17,R18
P 9	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	7	R07,R08,R09,R19,R20,R21,R22
P10	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	5	R01,R02,R03,R04,R05
P11	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	1	R06
P12	2202-000173	C-CERAMIC,MLC-AXIAL;1nF,10%,50V,Y5P,TP,1.9x3.5	4	C14,C15,C16,C17
P13	2202-000807	C-CERAMIC,MLC-AXIAL;22nF,+80-20%,25V,Y5V,TP,3.5x19	4	C04,C06,C07,C10
P14	2401-000244	C-AL;100uF,20%,10V,GP,TP,6.3x7,5	1	C03
P15	2401-000914	C-AL;22uF,20%,16V,GP,TP,5x11,5	2	C05,C09
P16	2401-001212	C-AL;4.7uF,10%,50V,GP,TP,5x11,5	1	C08
P17	2401-002420	C-AL;470uF,20%,16V,GP,TP,10x12,5mm	1	C02
P 18	2401-002598	C-AL;220uF,20%,50V,GP,TP,10x16,5	1	C01
P19	2802-000161	RESONATOR-CERAMIC;4MHz,0.5%,TP,10.0x5.0x7.5mm	1	XTL1
P20	3711-000940	CONNECTOR-HEADER;BOX,4P,1R,2.5mm,STRAIGHT,SN	1	CON02
P21	3711-004142	CONNECTOR-HEADER;BOX,3P/5P,1R,5mm/2.5mm,STRAIGH	1	CON04
P22	3711-004143	CONNECTOR-HEADER;BOX,2P/3P,1R,5mm/2.5mm,STRAIGH	1	CON03
P23	DE13-20009A	IC;KA7533,DIP	1	IC03
P24	DE39-60001A	WIRE-SO COPPER;PI0.6,SN,T,52MM,TAPING_WIRE	7	J01,J02,J03,J04,J05,J06,J07
P24	DE39-60001A	WIRE-SO COPPER;PI0.6,SN,T,52MM,TAPING_WIRE	6	J08,J09,J10,J12,J13,J14
P25	3501-001050	RELAY-MINIATURE;24VDC,200mW,5A,1FormA,10mS,5mS	2	RY01,RY02
P26	3501-001062	RELAY-POWER;24VDC,523.2mW,16A,1FormA,15mS	1	RY03
P27	3601-001126	FUSE-FERRULE;250V,1.6A,QUICK-ACTING,CERAMIC	1	FUSE1
P28	3708-000525	CONNECTOR-FPC/FC/PIC;10P,2.54mm,STRAIGHT,SN	1	CON01
P29	DE07-20126A	LED DISPLAY;LTC-4638G,GRN,12,30,48.2X22.38	1	DSP1
P30	DE09-00008A	IC-MCU;KS57C0504-61D,M1733,4BIT	1	IC01
P31	DE26-20146A	TRANS-L.V;SLV-745EN,230V,50HZ,AC17/7V	1	LVT1
P32	DE30-20016A	BUZZER;CBE2220BA,STICK	1	BUZ1
P33	DE47-40024A	HOLDER-FUSE;FH-51H,7.5A	1	FUSE1

9. Schematic Diagrams

9-1 Schematic Diagrams

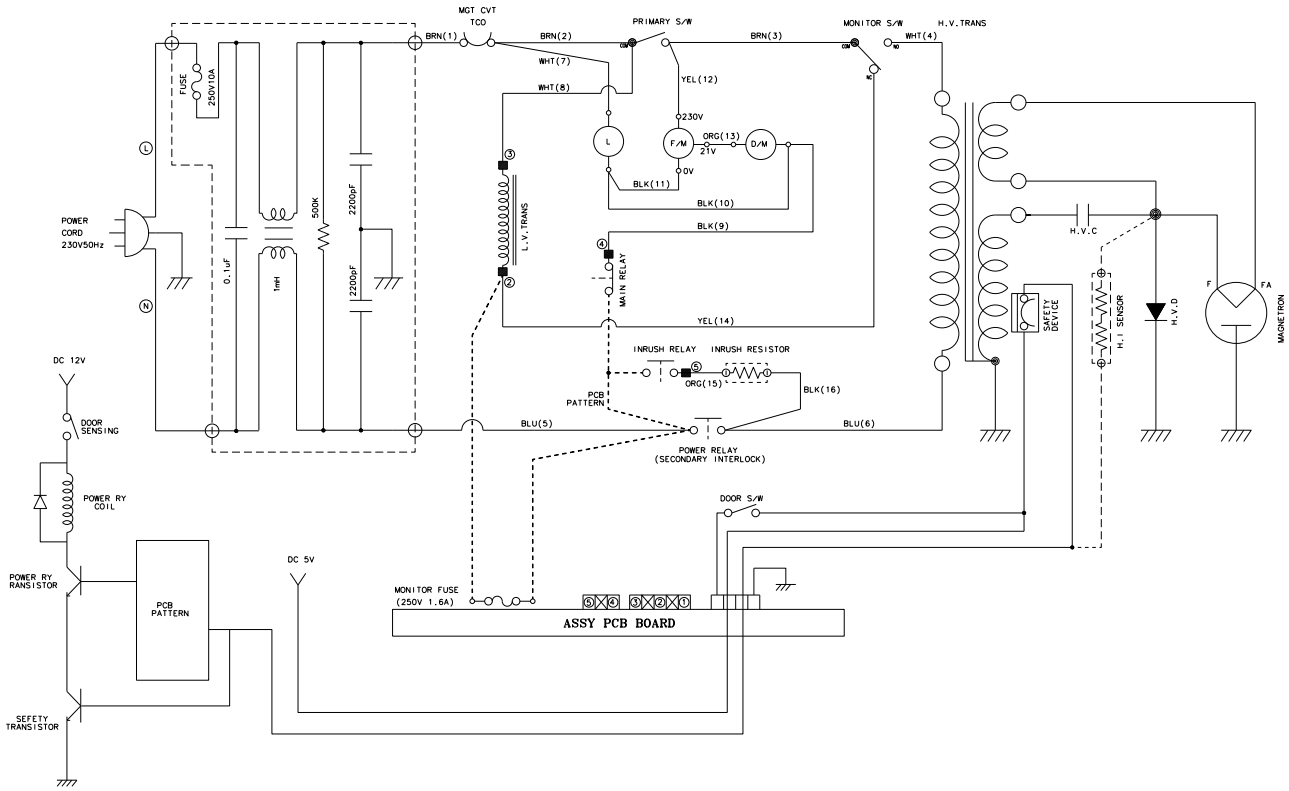

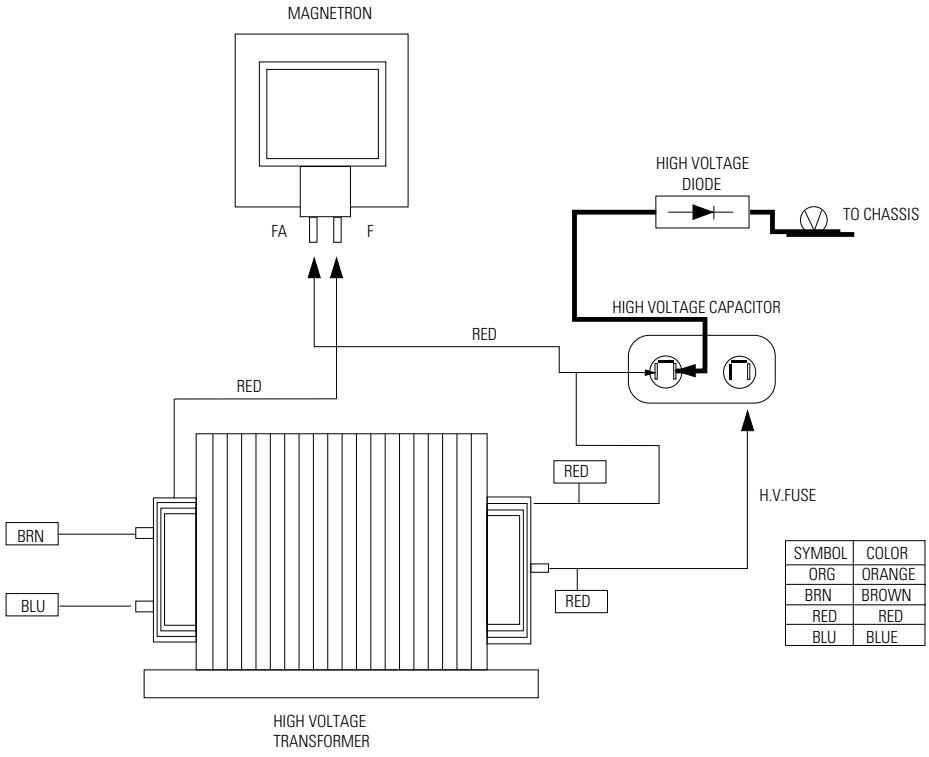

SYMBOL	COLOR
ORG	ORANGE
BRN	BROWN
RED	RED
BLU	BLUE